

INSTRUCTIONS FOR USE

Read the instructions below carefully so you can enjoy your purchase and avoid problems!

Attention!

Remember that the characteristics of a tube-made cigarette are different from those of a traditional cigarette. Because of the specific action of the cigarette injector, the ash is finer and falls away from the cigarette more easily. Neither the manufacturer nor any of its distributors can be held responsible for accidents resulting from these characteristics.

For best results, use tobacco marked “cigarette tobacco”.

1. Technical specifications:

The machine operates on 220 V AC.

2. Instructions for use:

- Insert the plug into the power outlet.

- Press the “tube” button on top of the machine to lower the black lever.

- Insert the cigarette tube onto the silver-colored metal tube holder while keeping the button pressed. Once the tube is in place, release the button.

- Set the graduated knob on the side to the desired tobacco density (position 3 gives the best results).

- Add loose tobacco to the hopper. Do not overfill it, otherwise it will be difficult to fill the cigarette tubes correctly. Better results are obtained with well-aerated tobacco.

- Press the “Start” button on top of the machine until the cigarette tube is completely filled.

Do not hold the tube back! The tobacco pushes it away from the machine; this is perfectly normal. If you hold the tube, tobacco will build up and damage the auger. The auger can only be damaged by misuse, which is why it is not covered by the warranty.

Attention! If the screw jams, stop immediately! (See Troubleshooting, point 1.)

- Unplug the machine after use.

A few tips:

1- If the tobacco does not move, release the button to stop the rotation. Remove a little tobacco from the machine and restart it with short, light presses. In all cases, do not touch the auger.

2- The first cigarette will always take a little longer because the metal tube holder is not yet filled.

3- Before storing the machine and after use, keep the button pressed until there is no tobacco left in the tube. Otherwise it will dry out and your next cigarette will be of poorer quality.

4- After making a cigarette, it is recommended to manually remove any tobacco remaining at the end of the metal tube. This makes insertion of the next tube easier.

5- For good results, always use fresh tobacco. This is also why we recommend keeping your tobacco in a suitable place with a humidifier.

Warnings

1. This machine may only be used by persons over 18 years of age! Keep out of reach of children.

2. Check that the appliance voltage matches your electrical supply.

3. Never immerse the machine in water or place it under a running tap.

4. The appliance must be unplugged after each use and before handling, cleaning or maintenance.

5. Never push the tobacco into the hopper with your fingers or with any other object.

6. Never insert foreign objects into the machine.

7. Never unplug the appliance by pulling on the cord.

8. Do not use the appliance if the power cord is damaged or shows any defect.

9. Using accessories not supplied with the machine may cause damage or injury.

10. If you use an extension cord, check that it is in perfect condition before use.

11. Use only pure tobacco. Remove twigs or other debris before placing tobacco in the machine. Failure to follow this rule may cause irreparable damage to the machine and void the warranty.

12. Always make sure the outlet of the metal tube holder is clear. The space beneath the spring must also be clear. If the spring makes a loud noise, the likely cause is debris trapped in the rod.

13. Do not try to stop the tube by hand or with an object while the machine is operating. This could be dangerous and may also irreversibly damage the spring.

14. During intensive use, after making approximately 20 cigarettes, the tube holder becomes very hot and must be allowed to cool. This is not only beneficial for cigarette quality, but will also extend the life of the machine!

15. Use standard tubes only (8 mm).

16. Never touch the metal tube holder during operation. It may become very hot and cause burns.

17. The machine warranty is valid only if the motor compartment is kept free of dust!

Using damp tobacco may discolor the spring and turn it black.

To ensure proper operation, the machine must be cleaned regularly. Unplug the machine and remove the metal tube and the spring, then clean them with a damp cloth. Refit all parts; the cigarette injector is then ready for use.

Troubleshooting

1) The spring is jammed.

Stop immediately.

Unscrew the screws next to the metal tube holder.

Remove the metal tube holder; the spring may remain in place.

Remove any dirt from inside the metal tube and refit it.

Make sure the longer part of the beveled rod faces downward, otherwise the adjustment will no longer work correctly.

2) The machine no longer works.

Tobacco may enter the motor compartment. This can block the switch and prevent the machine from operating.

To solve the problem:

a- Unplug the machine

b- Unscrew the 4 screws on the bottom

c- Remove the cover

d- Remove tobacco residue with a vacuum cleaner

e- Replace the cover

f- Tighten the 4 screws.

3) The metal tube holder becomes very hot.

This is normal, especially at the highest density setting. It is recommended to let the machine cool down after making 20 cigarettes.

4) The tobacco is too loose or too dense.

Everyone has their own preference for tobacco density. Position 3 is the most commonly used.

At position 5 the density is highest, and at position 1 it is lowest. You can experiment with the different settings to find the one that works best for you.

5) Warranty or after-sales service.

Art et Volutes guarantees the quality of this machine. If, however, a defect occurs during normal use within 12 months of purchase, Art et Volutes will repair or replace your machine. Return the defective machine in its original packaging together with proof of purchase to the store where you bought it.

The warranty does not apply to the spring if it has been damaged through misuse; a spare spring is supplied in the package. If misuse is repeated, additional springs can be purchased.

How do you smoke a tube-made cigarette?

In the same way as any hand-made cigarette.

Pack your cigarette by gently tapping it against a hard surface.

Remove excess ash with a twisting motion instead of tapping the cigarette. This helps keep the cigarette lit!